 


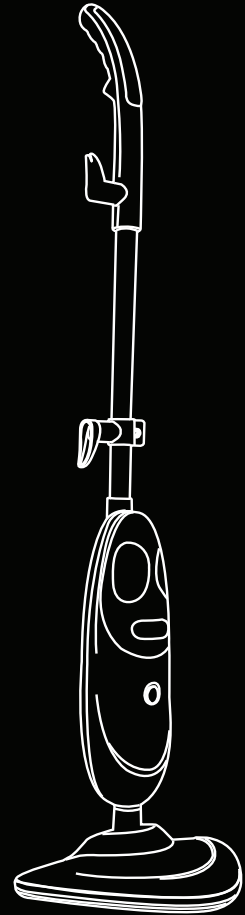


# Steam Cleaner




# Machine Overview

 - 1 Handle
- 2 Upper cord clip
- 3 Lower cord clip
- 4 Power cord
- 5 Clean water tank
- 6 LED indicator
  - a) Water heating/power on  
(orange LED)
  - b) Steam ready  
(orange LED) + (green LED)
- 7 Floor head
- 8 Steam release trigger

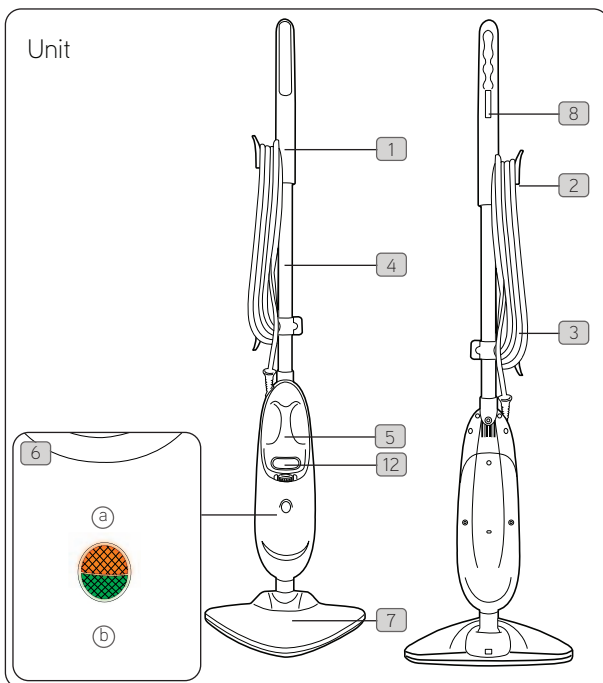

 - 9 Microfibre cleaning pad
- 10 Carpet glider (dependant on model)
- 11 Hard water filter (hidden)  
(pre-assembled in unit)
- 12 Cooling base (dependant on model)
- 13 Measuring jug (dependant on model)
- 14 Screw x 1
- 15 Washer x 1

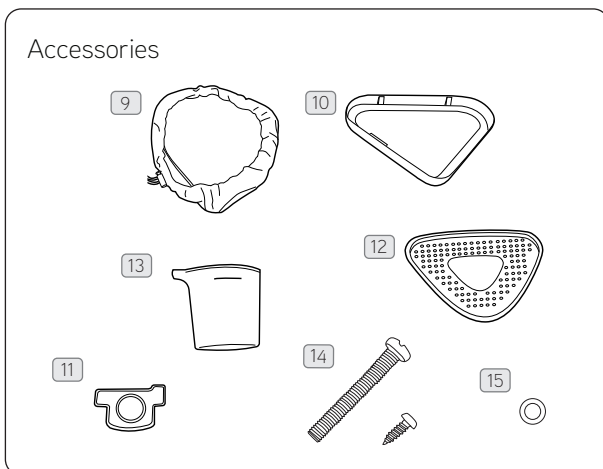

# General Safety Information

## FOR HOUSEHOLD USE ONLY.

When using the stick steam cleaner, basic safety precautions should always be observed, including the following:

**IMPORTANT:** Please refer to floor manufacturer's care recommendations before use and test the steamer on a discrete area of flooring to begin with.

**WARNING:** The stick steam cleaner head gets very hot during operation.

**WARNING:**  **Danger of scalding.** Avoid contact with the steam.

1. Do not leave the appliance unattended while it is switched on. Unplug the appliance from the mains supply socket before carrying out any maintenance or trouble shooting checks and before you fill/empty the water tank.
2. The appliance must be kept out of children's reach and should not be used by children.
3. In order to ensure safety, the appliance should only be assembled, connected and operated as set out in the instructions. Only use accessories, which are recommended by manufacturer.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Examine the appliance before use in order to detect signs of damage. Do not operate if the appliance, its power cord or plug, show any signs of damage. In order to comply with safety regulations and to avoid hazards, qualified personnel must carry out repairs of electrical appliances. If repair is needed contact the Vax Careline.
6. Do not use the stick steam cleaner if it has been dropped, damaged, left outdoors or dropped into water.
7. Check the appliance and the mains wire before each use.
8. Do not unplug by pulling on the cord.
9. Do not handle the plug or stick steam cleaner with wet hands.
10. After use unplug the appliance from the mains supply socket.
11. When the appliance is in operation, the floor head should not be directed toward humans, animals or plants.
12. Never immerse the appliance in water or other liquid.
13. Only use water in this appliance. De-scaling products, perfume, detergent etc. should not be used with this appliance, in order to avoid damage.
14. Turn off all controls before unplugging.
15. Do not attempt to remove blockages with sharp objects as they may cause damage.
16. Store indoors and put away after use to prevent tripping accidents.
17. Using improper voltage may result in damage to the motor and possible injury to the user. The correct voltage is listed on the rating label.
18. A hazard may occur if the stick steam cleaner runs over the power supply cord.

**NOTE:** If the supply cord is damaged it must be replaced by the manufacturer, or a similarly qualified person in order to avoid a hazard, or invalidating the guarantee.

**NOTE:** Before performing cleaning or maintenance tasks and after each use unplug the appliance from the mains supply socket and let it cool down sufficiently.

**NOTE:** The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

**IMPORTANT:** The clean water tank must not be removed.

**WARNING:** The appliance heats up during operation, therefore only touch handle or buttons. Always let the appliance cool down before attaching or removing accessories

 
**WARNING:** Never try to modify or change the mains plug of the appliance. Make sure that the supply voltage corresponds to the voltage marked on the rating label of the appliance.

**This stick steam cleaner is intended for household use only and NOT for commercial or industrial use.**


**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.**

# Operation


## Assembling your stick steam cleaner

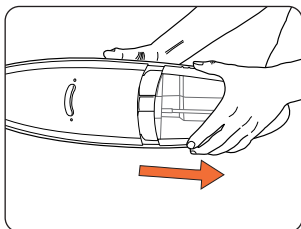

Remove clean water tank.

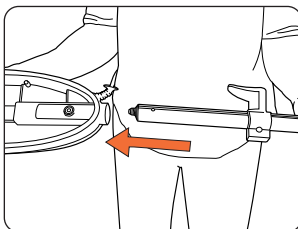 

 Insert handle into main body. Line up the screw holes on the handle and the main body.

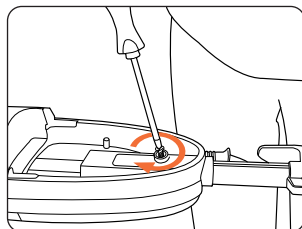


Secure the handle in place with one of the screws provided.

## Before you begin cleaning

 
**IMPORTANT:** Please refer to floor manufacturer's care recommendations before use and test the steamer on a discrete area of flooring to begin with.

**WARNING:** To reduce the risk of personal injury, unplug the steamer when assembling the unit.


**IMPORTANT:** Do not over-fill the water tank.

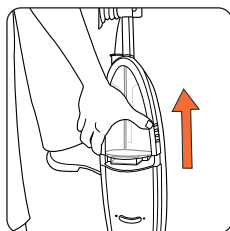


Remove the clean water tank.

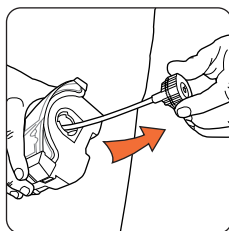 

Twist the cap anti-clockwise to remove.

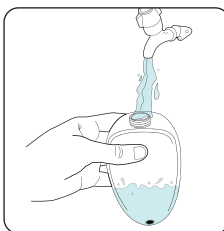 


 
Fill the tank with 500ml of water and replace the water cap. Tighten by twisting clockwise.

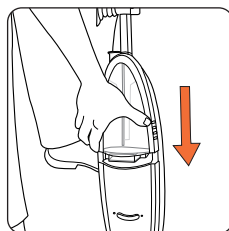

Replace the clean water tank, clicking into place making sure the hard water filter is in place.

# Operation
  
## Before you begin cleaning

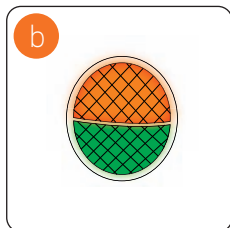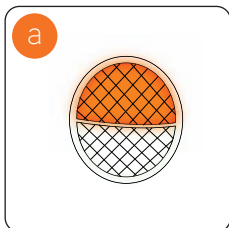


- a Orange LED will illuminate when the unit is switched on at the plug and water is heating.
- b After approximately 1 minute the green LED will also illuminate showing steamer is ready to use. The green LED will go off when unit water is re-heating.


## Attaching the microfibre cleaning pad

 **WARNING:** To reduce the risk of personal injury, unplug the steamer when assembling the accessories.

**IMPORTANT:** Never use the stick steam cleaner without the microfibre cleaning pad correctly attached to the floor head.

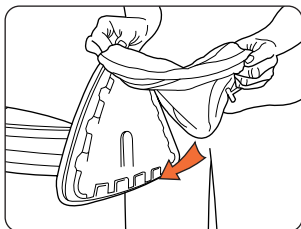

 Place microfibre cleaning pad over the floor head.

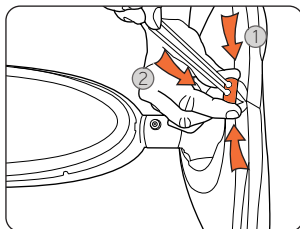

Tighten the drawstring so the microfibre cleaning pad is fitted securely.

# Operation

## Steam cleaning hard floors

 
**IMPORTANT:** Please refer to floor manufacturer's care recommendations before use and test the steamer on a discrete area of flooring to begin with.

**WARNING:** Never leave the stick steam cleaner in one spot on any surface for an extended period of time with a damp or wet microfibre cleaning pad attached as this may damage the floor surface.


**WARNING:** Your stick steam cleaner should only be used on tiles, lino or sealed wood flooring. Do not use on laminate flooring.

**IMPORTANT:** Never use the stick steam cleaner without the microfibre cleaning pad properly attached to the floor head.


**WARNING:** To reduce the risk of personal injury, unplug the steamer when assembling the accessories.

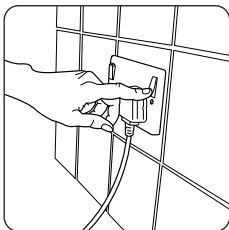

 
Plug into mains and wait for the green light (on the main body) to switch on after 1 min.

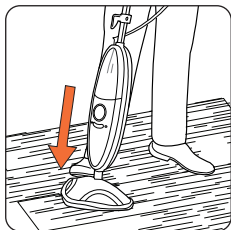

 To recline the unit place foot on floor head and tilt handle.

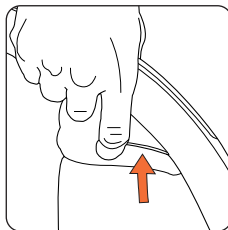


To produce steam squeeze the trigger.

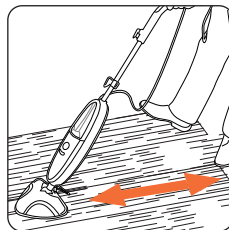 


Move the stick steam cleaner slowly backwards and forwards across the floor paying particular attention to high traffic areas.

## Refreshing carpets (dependant on model)

 
**IMPORTANT:** When using on carpets, always ensure the microfibre cleaning pad is properly attached to the floor head.

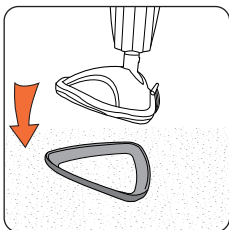

 
Attach carpet glider attachment to floor head.

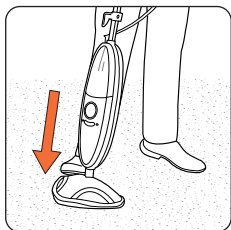

 To recline the unit place foot on floor head and tilt handle.

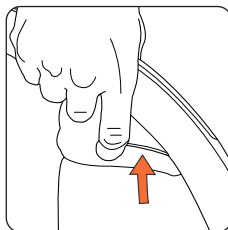

To produce steam squeeze the trigger.

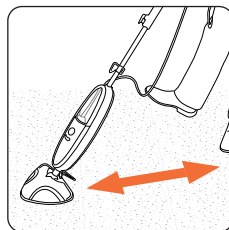 


Move the stick steam cleaner slowly backwards and forwards across the floor paying particular attention to high traffic areas.


# Maintenance (Keep your Vax as good as new)
 
## Empty the water tank


**IMPORTANT:** Allow the unit to fully cool down before performing any maintenance or troubleshooting checks.

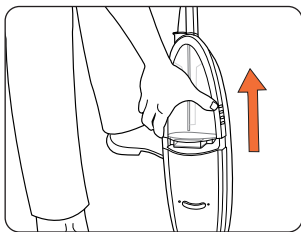

Remove the clean water tank.

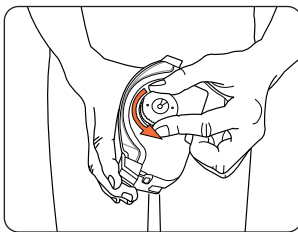 


Twist the cap anti-clockwise to remove.

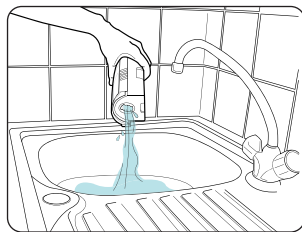 


Empty any excess water over the sink, replace water cap and return to the unit.

## Remove the microfibre cleaning pad from the unit

 **IMPORTANT:** Allow the unit to fully cool down before performing any maintenance or troubleshooting checks.

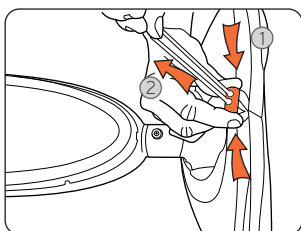

Undo drawstring.

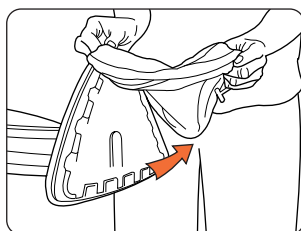 

Remove microfibre cleaning pad.

## Cleaning the microfibre cleaning pad

**IMPORTANT:** Never use bleach or fabric softener when washing the microfibre cleaning pad.

1 Machine washable at max temperature 40°C. Always use a mild detergent.

 
 
2 Leave the pad to dry for 24 hours.

# Maintenance (Keep your Vax as good as new)

## Replacing the hard water filter

**IMPORTANT:** The condition of the filter affects the performance of your machine. Check and change filter (depending on level of use).



Your machine is fitted with a hard water filter. If you live in an area of hard water the filter will discolour/darken over time (2). Depending on water hardness and/or frequency of use the filter should be changed every 6 months, or once the filter has completely darkened.

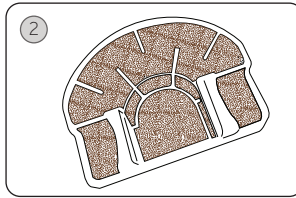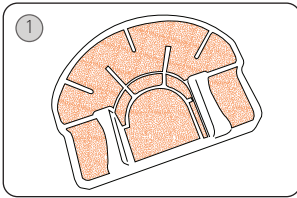

## Replacing the washers (dependant on model)


**IMPORTANT:** Allow the unit to cool down fully before performing maintenance or troubleshooting checks.

  Over time, the floor head can become loose. You may need to replace the washers at the end of the body unit with the replacement washers provided.

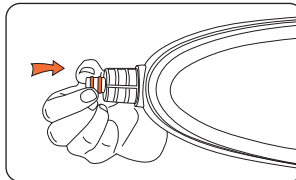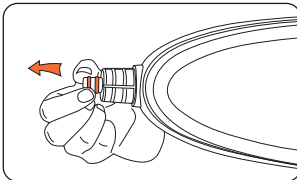

## After steamer use/using cooling base/storage (dependant on model)

 After using the stick steam cleaner and to avoid damage to your floors, unplug the unit and place stick steam cleaner on cooling base until product cools. Once cooled, remove steamer pad and follow 'cleaning the pads' section. Empty out any remaining water in the tank and clean the external surface with a dry cloth.

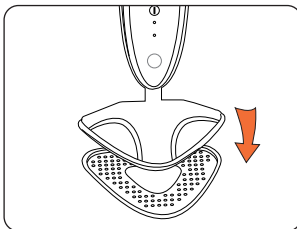



**WARNING:** to reduce the risk of personal injury, unplug the steam stick before performing maintenance/troubleshooting checks.

## Is there an accessory missing?

- Check the Parts Overview page in the guide to make sure the part is definitely included in your unit
- If the part is missing we're here to help. Simply call us on: **0844 412 8455**

## Why won't the stick steam cleaner run?

- Unit may not be plugged into the electrical outlet correctly, ensure the plug is pushed in securely
- The electrical outlet may not be working properly, check the fuse or breaker, or consult an electrician
- The power cord may be damaged, if it is it must be replaced by the manufacturer or similarly qualified person

## What do I do if an accessory/the unit has become damaged or broken?

- Visit **vax.co.uk** for parts and spares
- Please call our Careline to purchase new spares or order a replacement

## Why is the stick steam cleaner not producing steam?

- There may be no water in the tank; please refer to the operation section
- The water tank may not be fitted correctly; please refer to the operation section

## Why won't the microfibre cleaning pad pick up dirt?

- The cleaning pad may already be saturated with dirt and needs washing, please refer to the maintenance section

## we're here if you need us

Instead of taking me back to the shop, simply visit;

**vax.co.uk/support • vaxireland.ie**

or call:

(UK) 0844 412 8455 (ROI) 1-800 928 308

This does not affect your statutory rights.

# Other Information

## UK Service & Help

Any queries or concerns about using your Vax, simply visit; [vax.co.uk/support](http://vax.co.uk/support) – [vaxireland.ie](http://vaxireland.ie) or call the Vax Careline. Calls are charged at the UK local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

Vax Careline:

(UK) 0844 412 8455

(ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm

Saturday 9.00am to 5.00pm

## Consumables

To purchase spares and accessories, please visit [vax.co.uk](http://vax.co.uk)

The use of genuine vax spare parts helps to maintain optimised performance and validates your guarantee

Hard water filter (Type 2): 1-1-132541-00

Microfibre cleaning pads (Type 2): 1-1-132541-00

Coral cleaning pads (Type 1): 1-1-131643-00



For best performance  
Protect your guarantee

## Technical Specification

Voltage: 220-240V

Wattage: 1400-1600W (dependant on model)

Water tank capacity: 400ml

Cord length: 5.5m

Weight: 3.8kg

Subject to technical change without notice.



## EEC Statement of Compliance

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the

**S87-CX series** is manufactured in compliance with the following Directives:

**Safety:** 2006/95/EC Low Voltage Directive

**EMC:** 2004/108/EC Electromagnetic Compatibility Directive



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.





Vax Ltd, Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK  
email: [info@vax.co.uk](mailto:info@vax.co.uk) - website: [vax.co.uk](http://vax.co.uk)



You're home.™

1 year  
guarantee

# Window Vac

## Window Cleaner Range

### Let's get started



H87-WV-B  
/VRS1WV

[vax.co.uk](http://vax.co.uk)

# Let's talk safety



## Basic safety precautions

**This Window Vac is intended for household use only and NOT for commercial or industrial use.**

When using the Window Vac basic safety precautions should always be observed, including the following:

- Keep fingers, hair and loose clothing from moving parts and openings whilst using the Window Vac.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they

have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

- Only Vax recommend charger, accessories and solution should be used with this Window Vac.

**Please keep instructions for future reference and use the Window Vac only as instructed in this guide.**



## Don'ts

**This Window Vac is intended for indoor use only and NOT for outdoor use.**

- ✗ Don't use this Window Vac if it has been dropped, damaged, immersed in water or left outdoors.
- ✗ Don't unplug the Window Vac or pull the Window Vac by the charger cord. Don't use the charger cord as a handle, pull the charger cord around corners or sharp edges or close a door over the charger cord.
- ✗ Don't charge the Window Vac if the Charger cord or plug is damaged. Please contact our Customer Care Line.
- ✗ Don't use the Window Vac charger with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- ✗ Don't handle the plug or use the Window Vac with wet hands.
- ✗ Don't use the Window Vac whilst connected to the charger unit.
- ✗ Don't throw the Window Vac into fire or expose to high temperatures, as the Window Vac contains a rechargeable battery which may cause damage or burst. Never dismantle the battery or replace with a different type.
- ✗ Don't attempt to remove blockages with sharp objects as this may cause damage to your Window Vac.
- ✗ Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).



## Do's

- ✓ Only use the Window Vac indoors on vertical surfaces.
- ✓ Always make sure water container are fitted correctly before using your Window Vac.
- ✓ Turn off all controls on the Window Vac before disconnecting or connecting the charger.
- ✓ Always switch off the Window Vac and disconnect the charger before carrying out any maintenance.
- ✓ Always replace the fuse in the plug with a British 13amp fuse. Always protect the charger cable from heated surfaces or near open flames.
- ✓ Use only CE approved 13amp extension cords, non-approved extension cords may overheat.
- ✓ Always charge the Window Vac indoors.
- ✓ Always carry the Window Vac by the handle.
- ✓ Store your Window Vac in a cool, dry area away from children.
- ✓ Only use Vax recommended batteries and solution.

# Thank you for buying this Window Vac

## Taking care of your windows

The Window Vac Window Cleaner is designed to clean windows regularly as effectively and efficiently as possible and this user guide will help you get the most out of your machine.

Clean windows look better and make your home brighter.

## Taking care of your Window Vac

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your windows.

## Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

**vax.co.uk/support** or call:

(UK) **0844 412 8455** (ROI) 1-800 928 308

**Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm**

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the Window Vac before calling.

Alternatively, you can write to us at:

**Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK**



**You're home.™**



Let us know what you think **@VaxUK**

# Contents

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

Let's talk technical

What to do if it goes wrong

 
Getting in touch

## Window Vac

### Included with your machine



Charger



Microfibre pad



Scrub pad



Vax window cleaning solution



# Getting to know your machine



## Technical Specification

Name **Window Vac**  
Voltage **3.7V**  
Weight **0.75kg**

## Accessories & Consumables

 
Microfibre pads (Type 1)\*  
**1-1-133091-00**  
Scrub pads (Type 2)\*  
**1-1-133092-00**

# Getting started


**PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE**

**IMPORTANT:** This Window Vac is to be used on vertical surfaces only.


**NOTE:** Fully charge the battery before first use. Initial charge is 3 hours. Don't use the Window Vac whilst connected to the charger unit.

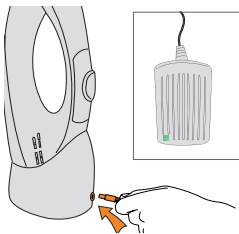

 
Plug charger into the mains and insert the charger cable into the back of the Window Vac.

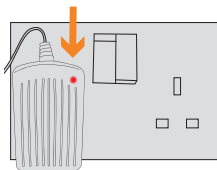

 
The indicator light will show red while the machine is charging.

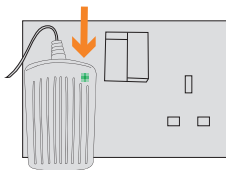

 
The indicator light will change to green when fully charged.

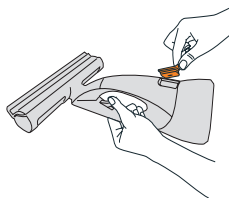

 
To fill the water tank lift the water tank cap.

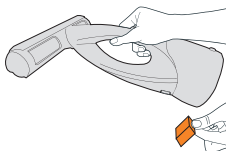

Remove foam filter.

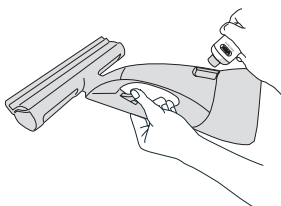 

 Pour in 40ml Vax Window Cleaner solution.

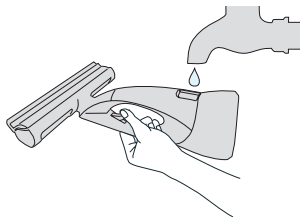

Top up with water (max 40°C) to max level. Replace filter and push the water tank cap back into the machine. When fitting the water tank cap back into the machine ensure the tab is facing downwards to prevent leaking.




## WARNING

 
Always switch off and unplug the Window Vac from the electrical socket before assembling, opening or emptying the water tank, or before connecting/disconnecting the attachments or performing any maintenance.

# Using your machine


## Using your Window Vac

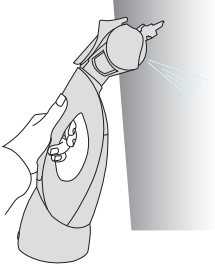

 
Pull the trigger to spray solution onto the surface to be cleaned.

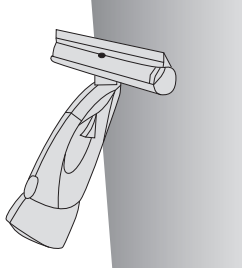

 
Wipe the surface with the microfibre or scrub pad on the back of the machine.

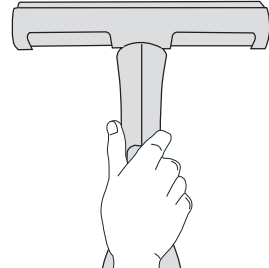

 
Whilst pulling the trigger to spray solution, you may need to press the trigger a few times first before solution is dispensed, this clears air from the Window Vac.

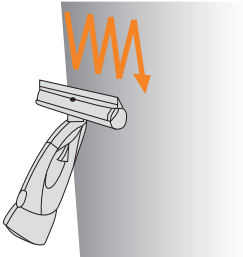

 
Move the Window Vac in a zig-zag pattern to avoid over-saturating a single point.

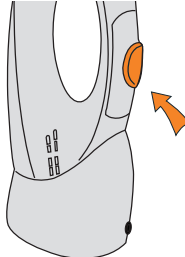

 
To turn the Window Vac on, press the power button. You will hear a click sound.

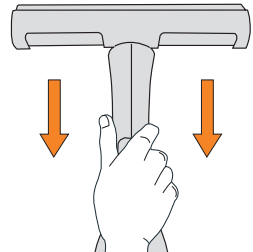

 Vacuum up water using slow, straight strokes.

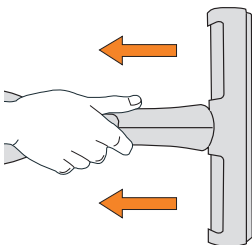


Finish with sideways strokes.

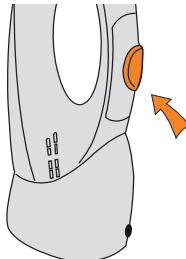 

After use press the power button to turn off.

# Taking care of your machine

 
**Note:** The Window Vac must be emptied after each use – DON'T store water/solution in the machine between uses.

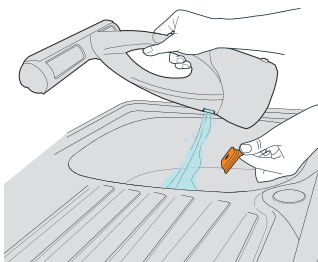


After use, open the water tank, remove the filter and empty water into the sink.



 Rinse filter under running warm water (Max 40°C).

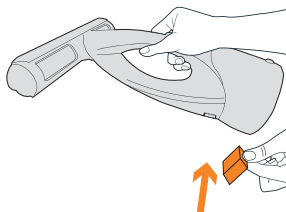


 Squeeze any excess water from filter before replacing into the Window Vac.

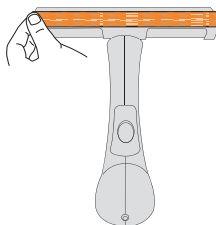


To remove the cleaning pad grasp one end of the cleaning pad and gently pull, this can be machine washed (Max 40°C).

## Storage

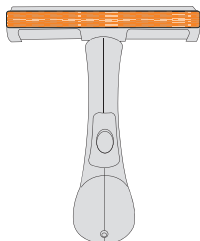 


The Window Vac must be stored in a vertical position.

 
**Note:** Fitting the squeegee incorrectly will result in poor pick up.

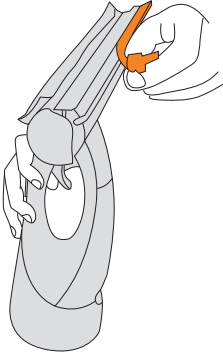

 
If the squeegee blade becomes dirty it can be removed and washed. Grip the blade and gently pull from the machine.

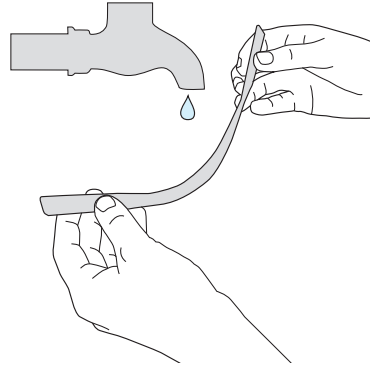

Rinse under running water (Max 40°C).

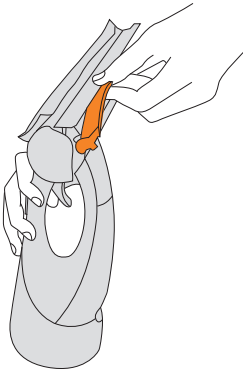 

 To refit, push the squeegee blade back into the machine. Making sure the suction holes are facing the same side as the water tank.

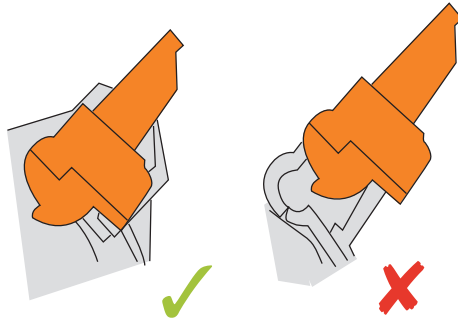

The squeegee needs to be pushed firmly down into the machine so there is no gap.

**Important:** Remove the battery from the appliance before recycling. For further information please contact your local waste management centre.

# What to do if it goes wrong

## Problem

## Solution

Why won't my Window Vac turn on?

- The battery may not be charged. Connect the charger, the indicator light will turn green when fully charged. The initial charge should be for 3 hours.
- The unit might be plugged in. The Window Vac will not run when the charge is plugged in.

Why won't the Window Vac pick up?

- The squeegee blade may be blocked. Remove from the machine, rinse and clear any dirt/debris. Go to the 'Let's talk technical' page.
- The filter may be clogged or dirty, clean the filter. Go to the 'Taking care of your machine' pages.
- The Window Vac may be low on charge, plug the Window Vac in to recharge
- The water tank may be full, empty the water tank. Go to the 'Taking care of your machine' pages.

Why does my Window Vac leak?

- You may be using the Window Vac on a flat, horizontal surface, only use the Window Vac on vertical surfaces
- The water tank may be full, empty the water tank. Go to the 'Taking care of your machine' pages.

Why does my Window Vac leave a smear on my window?

- The squeegee blade may be dirty, remove and clean.
- The cleaning pads may be dirty, remove and wash.

Why won't the battery recharge?

- The charger may not be inserted correctly.
- Check the mains power is switched on.
- The electrical outlet may not be working. Check the fuse in the plug, always replace with a British 13amp fuse.

**Warning:** Always turn off and unplug the Window Vac before carrying out and maintenance/troubleshooting checks.

It's quick and easy to  
register for your **FREE**

**1 year  
guarantee**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

**we're here if you need us**

Online **vax.co.uk/support**

Call: (UK) **0844 412 8455** (ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm \*

*Alternatively, you can write to us at:*

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK



You're home.™



@VaxUK

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK  
email: [info@vax.co.uk](mailto:info@vax.co.uk) website: [vax.co.uk](http://vax.co.uk)

Version 1.0



**EEC Statement of Compliance:** Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the H87-WV/VRS1WV series is manufactured in compliance with the following Directives:  
**Safety:** 2006/95/EC Low Voltage Directive. **EMC:** 2004/108/EC Electromagnetic Compatibility Directive.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.  
Check with your Local Authority or retailer for recycling advice.